



Dust Care® Division of BVC
1820 S. Cobb Industrial Blvd.
Smyrna, GA 30082

INSTRUCTIONS

- Connect your vacuum on an electric circuit in conformity to the specifications indicated on the identification plaque found on your vacuum cleaner.
- The machine should be installed in an area where the temperature does not exceed 40°C.
- Avoid placing objects on your machine. Make sure that nothing blocks or penetrates the ventilation openings of the motor.
- If suction decreases:
 - 1- Clean the filter by hand-shaking it. Certain dust particles may block the filter more easily than others (ex. gyproc dust).
 - 2- Empty the canister.
 - 3- Check all the rubber parts placed inside the covers found on the wall outlets.
- If the motor stops, re-start by pressing on the reset button.
- The cleaning of the canister should generally be done every three (3) or four (4) months.
- You may wash the filter with soapy water.
- Check the brushes carbon at 500 hours of use (only domestic use).

ATTENTION: Never use vacuum without the filter.

(See over)



WARRANTY

IMPORTANT: Void if not filled in by the customer and mailed immediately.

Serial No. _____

Model _____

Customer's Name _____

Address _____

Zip Code _____ Tel. No. _____

Date of Purchase _____

Dealer's Name _____

Address _____

Zip Code _____ Tel No. _____



Customer's Card

Serial No. _____

Model _____

Dealer's Name _____

Address _____

Zip Code _____ Tel No. _____

Date of Purchase _____

Dust Care® offers a two years warranty on your new vacuum system. We only guarantee those machines bought for household purposes and used under normal conditions. This warranty covers both, parts and workmanship.

An additional 5 years warranty is offered and it covers the motor, (parts only) against any manufacturer's defects.

Transportation cost are the customer's responsibility. (See over)